






COMPARTMENTATION or Smoke VENTING & CONTROL - Understand the difference

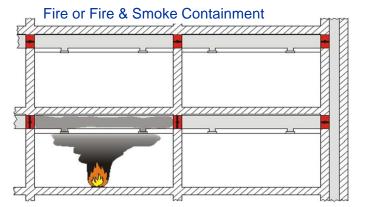

Fire Damper - To maintain COMPARTMENTATION **CLOSE & remain closed** Maintain fire (& smoke) integrity of the support construction

For use in HVAC systems

Evaluated to

- close & remain closed on thermal activation or from external signal
- be fire resisting to the standard time temperature test curve
- Maintain leakage performance at elevated temperatures and positive pressure

Does **not** require permanent power supply

HVAC system Fans shut down under fire conditions

Heat & Smoke Transport

Smoke Control Damper

(when 'S' & C_{10,000} /C_{mod} classified)

Fans operate under fire conditions

Smoke Control

Fire Damper / MSFD (motorised leakage rated fire damper) Not evaluated to open and maintain opening above ambient. Therefore

> **NOT** proven for smoke venting NOT compatible for smoke venting systems









UKCA / CE marked to -3^{rd} party (Notified Body) accredited

- BS EN 15650 Product Standard - BS EN 15882-2

- BS EN 1366-2 Test Standard Classification Std. - BS EN 13501-3

Code = **E** I tt (ve, ho, i \leftrightarrow o) **S**

E = Fire Integrity leakage limited to 360m³/h.m² I = Insulation. Maximum 180 °C 25mm from wall

S = Smoke leakage limited to 200m³/h.m²

ve = vertical

ho = horizontal

Fire exposure direction

i⇔o = actuator hot and cold side approved

 $i \rightarrow 0$ = actuator cold side approved

i ←o = actuator hot side approved

Fire Damper variants

FD = Fusible link fire damper min. E classified MSFD = Motorised fire damper min. ES classified Electronic thermal device integrated into actuator

Fire Damper **essential** components

- Fire resistant movable barrier
- Thermal release device
- Automatic Closing device

Smoke Control Damper - To form a PATH

from fire compartment to the open air OPEN and maintain opening or **CLOSE & remain closed**

- Extraction systems
- Ductwork systems
- Cold smoke removal after fire

For use in

- Pressurisation systems
- Pressure relief systems

Evaluated to

- be heat resisting at elevated temperatures (single compartment) or fire resisting to the standard time temperature test curve (multi compartment)
- be applied to automatic or manual intervention systems
- open then close or close then open at elevated temperature
- when open, to maintain cross section area at elevated temperature
- when closed maintain leakage performance at elevated temperature and negative pressure. known maximum leakage to allow sensible fan selection and give a guide to smoke not leaking back through.

Function - Create a path

- Failsafe stay in position i.e.- OPEN or CLOSED
- Permanent power supply
- NO devices to cause uncontrolled operation NO Thermal release NO spring return

Smoke Control Damper Variants

- Elevated temperature Single compartment classified
- Full fire resistance Multi compartment classified
- Classified to match intended system requirements

CLOSED

- Fire Integrity
- Leakage integrity

Stav in position

OPENED

Open against force

Maintain open area







UKCA / CE marked to -3^{rd} party (Notified Body) accredited

Product Standard - BS EN 12101-8 Test Standard - BS EN 1366-10 & 2 Classification Std. - BS EN 13501-4

Code $\mathbf{E}_{xxx}\mathbf{I}$ $tt(\mathbf{v}_{exx} - \mathbf{h}_{oxx} \mathbf{i} \leftrightarrow \mathbf{o})$ Sxxx Cxxx XA xxx

Classification order = Highest, top Include lower orders lowest, bottom

E = Fire Integrity

El multi = Fire resistant to STTC

E₆₀₀ ..**single** = 600°C Temp resistant

I = Insulation. Maximum 180 °C 25mm from wall S = Smoke leakage limited to 200m³/h.m²

 $S_{1500} = +500 \text{ to } -1500 \text{ Pa approved}$

 $S_{1000} = +500 \text{ to } -1000 \text{ Pa approved}$ $S_{500} = +500 \text{ to } -500 \text{ Pa approved}$

C = System type – durability

C_{mod} = Combined system using modulating actuator (static balancing) in ventilation mode only

C_{10,000} = Combined Smoke control & HVAC system

 C_{300} = Dedicated Smoke control system emergency only A = Initiation Regime

MA = Automatic Activation, with manual intervention

AA = Automatic Activation, without any manual intervention

$v_a = Closed blade vertical$

 \mathbf{v}_{ed} = vertical, in duct, \mathbf{v}_{ew} = vertical, in wall \mathbf{v}_{edw} = vertical, in shaft & wall h_o = Closed blade horizontal

h_{od} = horizontal in duct. h_{ow} = horizontal in floor h_{odw} = horizontal in duct & floor Fire exposure direction

 $i \leftrightarrow o =$ actuator hot and cold side approved

Suitable for combined HVAC and smoke extract